


INSTALLING NEW STYLE 4 & 6 COLOUR CIS CARTRIDGES WITH PIGGYBACKED EPSON ORIGINAL CART ON TOP.

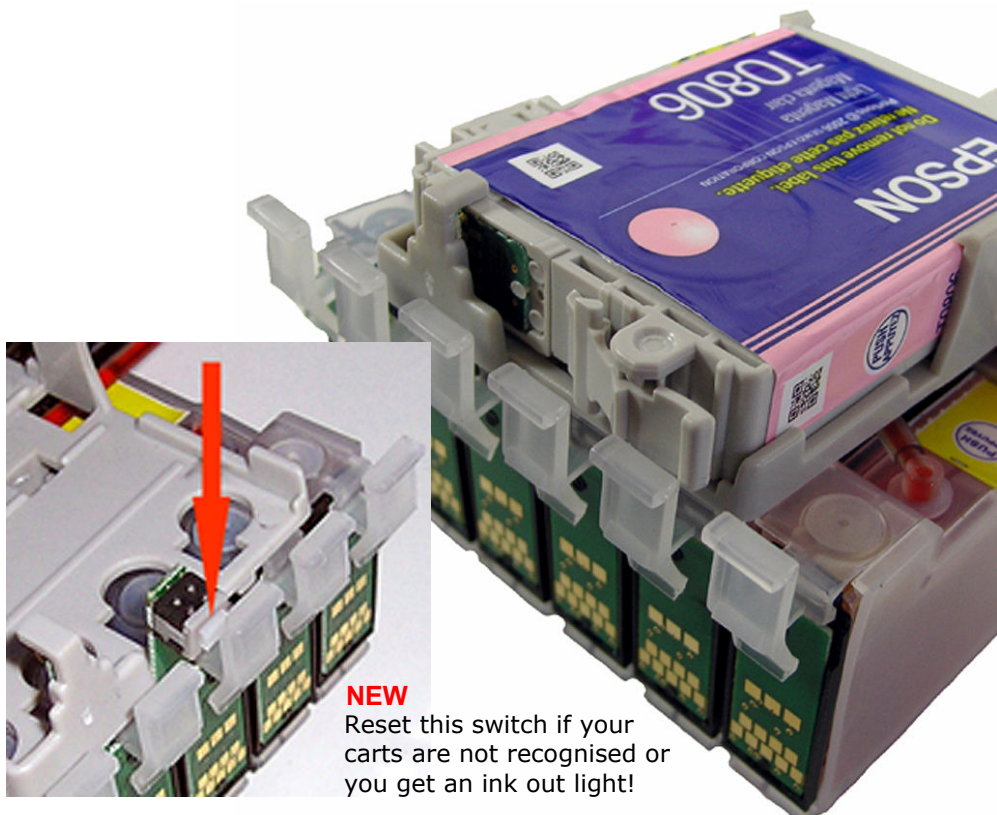

If your system uses the new style CIS carts that have an original Epson cart piggybacked on top then you should follow the instructions below for easy installation!

- 1) When fitting the block of CIS cartridges it needs a lot more pressure to install them, they need to be pushed firmly down into the cartridge carriage until they click!
- 2) Following installation if you get a red 'ink out' light check the following. Firstly push the the manual reset switch shown above in and then let it come back out again

On most printers all cartridges will automatically reset to full when the ink monitor nears empty. If this does not happen and the printer stops and gives a red light when a cart is out of ink then you will need to use the manual reset button to reset the cartridges as described in (2) above!

NOTE:- If you have an Epson Photo 1400 you can also use any T0791, T0792, T0793, T0794, T0795 or T0796 cartridge on top. Also the 1400 CIS does not have a manual reset switch.